



50 305

Code OND50/I Code OND50/2 Oak (brown) Code OBD50/2 Oak Oak Code OND50/3 Oak (brown) Oak (arabica) Code BND50/I Birch Oak (arabica) Birch Birch Code BND50/3 Oak (arabica)

IMPORTANT

Due to the qualities of solid wood, decorative elements may be slightly warped.

It is advisable to use a thin metal saw and make a few groves across the height of the decorative element just before gluing it onto the wall.

The groves should be around 2/3 of the thickness of the decorative element. It will make the decorative element more flexible and make it easier to straighten it up when sticking it onto the wall.




Code OND129/I





Birch

Code BND129/I

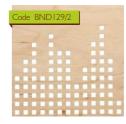



Oak (brown)
Code OBD129/I





Oak(arabica)

Code OAD | 29/| |





*N.B. only applies to square tiles 19x19, 25x25, 40x40

dark



Thermo wood









A range of tiles that have been treated to completely resist humidity and temperature changes. These tiles can be used for floors and walls in bathrooms, shower cubicles, SPAs, saunas or yachts. Finished with polyacrylic lacquer.







Abstract wood panel





Recommended adhesive, **KERA** OLL grout and remover:






48 Coffee



1. Spread a coat of adhesive in a uniform layer with a trowel (2-4mm notch)

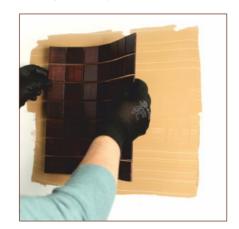

2. Place the tiles onto the spread adhesive, gently push them in until all the tiles seem even. Use standard tile spacers to separate tiles and tile sheets.



3. Apply the grout from bottom to top and across the seems. 5. Clean the residue with a damp sponge. Use



5. Clean the residue with a damp sponge. Use warm water to dampen the sponge.



4. Spread the grout so that all the spaces get filled in evenly.



6. Once the grout has dried, clean the tiles with a damp cloth and polish them using "KERAKOLL FugaSoap®Eco".

Make sure the surface is flat and hard, not too rough and not something that may warp or distort from adhesive or grout.

Also check if the surface can absorb the extra humidity from adhesive and grout. Check that the surface is dry, clean, free from damp risk, has no cracks or residue dust. Grout can be applied after the adhesive has dried. Approximately after 24 hours.



