


IMPORTANT

Due to the qualities of solid wood, decorative elements may be slightly warped.

It is advisable to use a thin metal saw and make a few groves across the height of the decorative element just before gluing it onto the wall. The groves should be around 2/3 of the thickness of the decorative element. It will make the decorative element more flexible and make it easier to straighten it up when sticking it onto the wall.






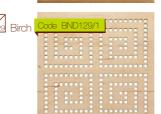





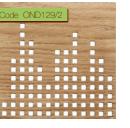















*N.B. only applies to square tiles 19x19, 25x25, 40x40

dark



Thermo wood





floors and walls in bathrooms, shower cubicles, SPAs, saunas or yachts. Finished with polyacrylic lacquer.







Abstract wood panel



Recommended adhesive, grout and remover:








Eco L34 Flex (adhesive) Fuga

Collection

Crystal Collection

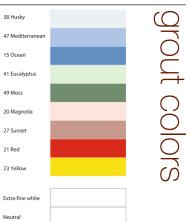

01 White 02 Light Grey Cassic Collection 03 Pearl Grey 04 Iron Grey 05 Anthracite 06 Black 08 Bahama Beige 09 Caramel 10 Terracotta 11 Brown 12 Walnut 51 Silver Design Collection 50 Pergamon 46 Ivory 45 Limestone 52 Dove Grey 44 Cement Grev 48 Coffee

www.kerakoll.com



grouting



3.Apply the grout from bottom to top and across the seems.



5. Clean the residue with a damp sponge. Use warm water to dampen the sponge.



2.Place the tiles onto the spread adhesive, gently push them in until all the tiles seem even. Use standard tile spacers to separate tiles and tile sheets.

in a uniform layer with a

trowel (2-4mm notch)



4.Spread the grout so that all the spaces get filled in evenly.



6. Once the grout has dried, clean the tiles with a damp cloth and polish them using "KERAKOLL FugaSoap®Eco".

Make sure the surface is flat and hard, not too rough and not something that may warp or distort from adhesive or grout. Also check if the surface can absorb the extra humidity from adhesive and grout. Check that the surface is dry, clean, free from damp risk, has no cracks or residue dust. Grout can be applied after the adhesive has dried. Approximately after 24 hours.



